


Fitting guide


Spraydown flaps unique construction means the fixing arrangements are different to other mat-type flaps. Follow the guidelines below to ensure the flaps work as designed and to their optimum performance.

spraydown

Orientation on the vehicle

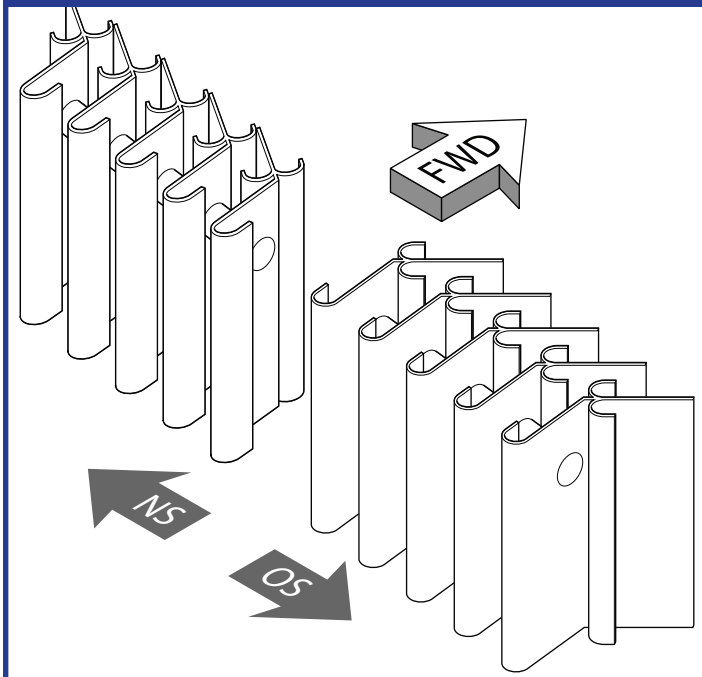



Installing the Brackets

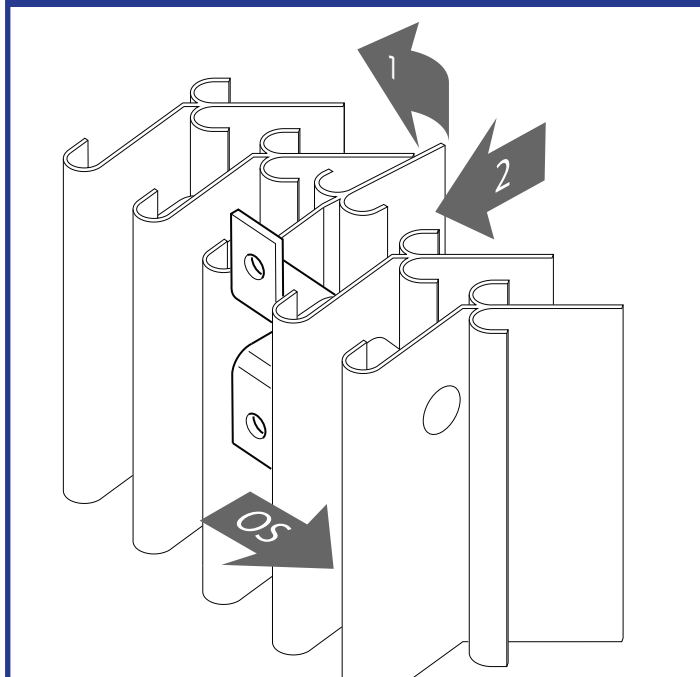

Fitting the Flaps to Mudguards

The flaps should be fixed to the mudguards using bolts, penny washers and locknuts.

- At least three fittings should be used as per the diagram.
- Do not position the flap further into the mudguard than is necessary for fixing.
- Fit at the maximum distance from the ground (200mm or 300mm for Ro-Ro Ferries).

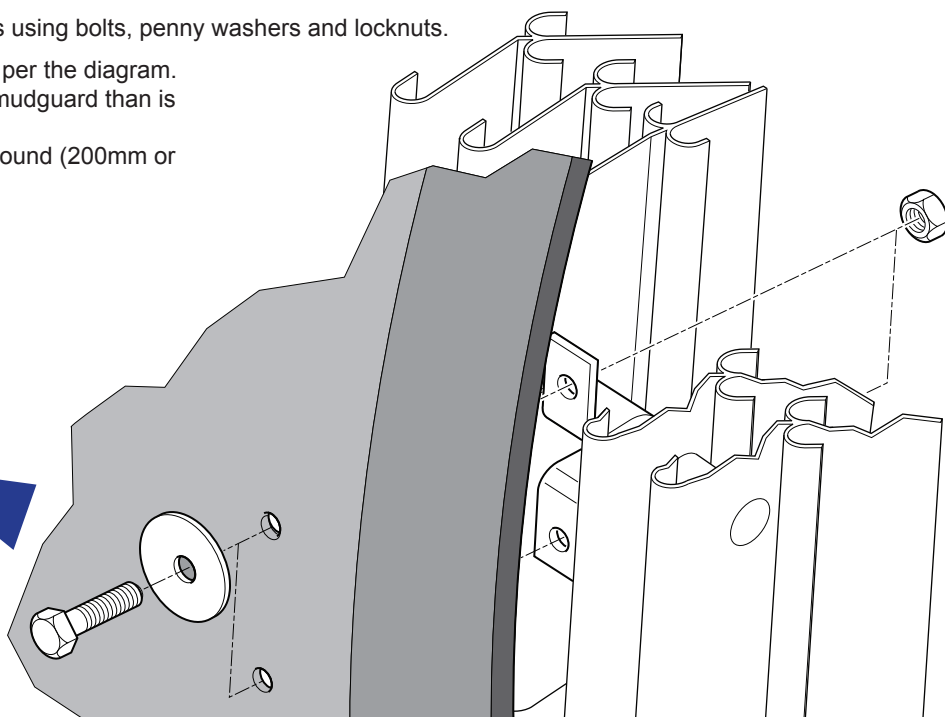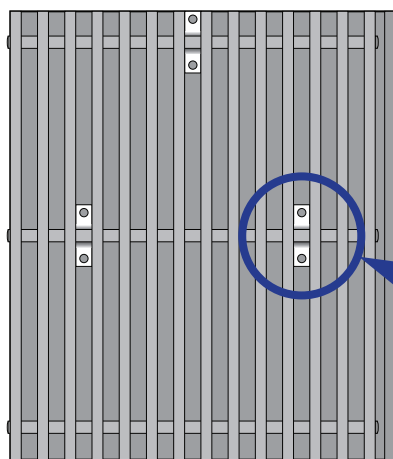

When fitting the flap:

- Adhere to the normal safety rules and regulations when working on the vehicle
- Fitting the flaps is easier if the mudguards are off the vehicle.
- Position the new flaps in accordance with vehicle regulations and drill the mudguards.
- Ensure the mudguards are in good condition.
- Use penny washers with locknuts or standard nuts with thread lock.

Other Applications:

- In other applications, use two fittings on the top tie rod and an anti sail bar or additional fittings on lower tie rods where appropriate